

# velorian

## BLINKERSET

### Hase TRIGO UP E



#### General safety instructions

---

The velorian e-bike indicator set Plug&Ride may contain small parts that could be swallowed by little children. There is a risk of injury when handling the cables and tools.

We recommend installation in a specialised workshop.

The electronics in the blinkerbox are protected against polarity reversal. This means that reversing the connection cables (mixing up plus and minus) on indicators, switches or the power supply will not destroy the electronics or the connected components.

#### Scope of delivery

---

In addition to the individually packaged components, all cables and splitters are usually packed together in the blinkerbox. This includes:

- 6-pin cable (violet) to the front of the handlebars
- 3-pole cable (yellow) to the rear
- a cable splitter for connecting the front indicators and switches
- one 3-pin to 2x2-pin cable splitter for the rear indicators



The extension cables are available in lengths of 10 cm, 20 cm, 30 cm, 50 cm and 100 cm to suit the respective frame size.

See <https://shop.velorian.de/Cable-and-Splitter-Plug-and-Ride>

#### General installation instructions


---

The blinkerbox is splash-proof. Nevertheless, the side with the two cables and the opening of the sounder should be attached in such a way that no water can collect on the sounder. This side should point downwards.

Make sure that the plug and socket are correctly aligned before making the connection! Otherwise, the pins could bend when plugging together, especially the multi-pin plugs.



**Schematic representation**

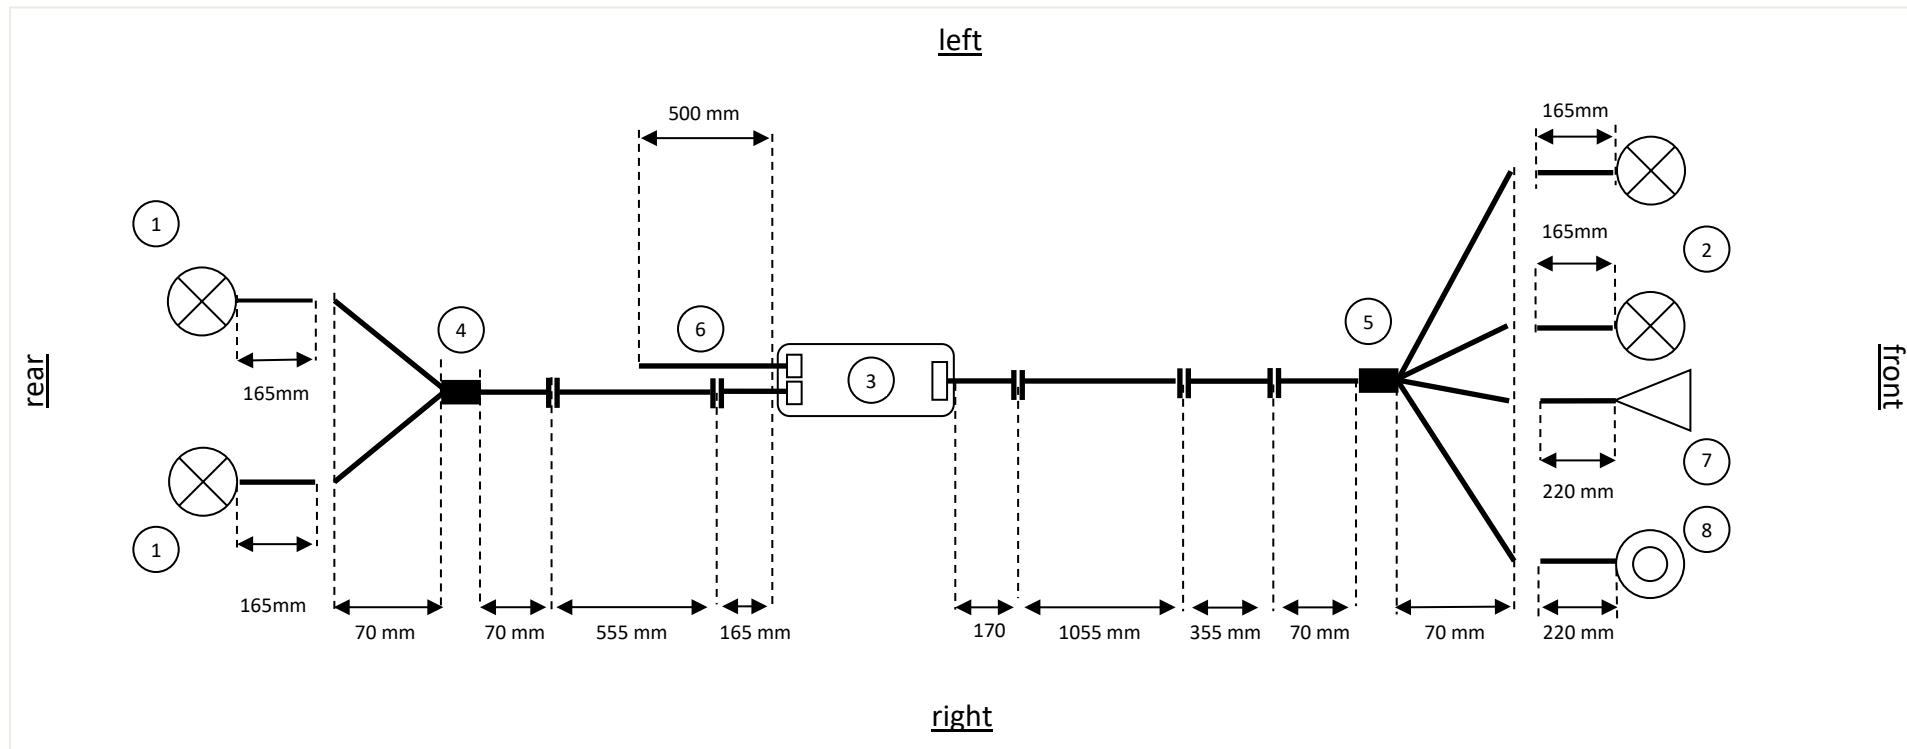

1. 1. LED indicator
2. 2. LED indicator
3. 3. Blinkerbox
4. 4. rear splitter to the indicators (cable marking for right-hand side)
5. 5. front splitter to switch and status LED and the front indicators (cable marking for right-hand side)
6. 6. 2-core power supply cable with a length of 500 mm
7. 7. indicator switch
8. 8. status-LED

**cable list**

3-wire	100cm
6-wire	100cm 30cm

The length specifications include the cable lengths including the connector dimensions. We reserve the right to make changes in line with technical progress.

## Indicator and switch mounting on handlebars



Fig. 1

To mount the front indicators, the upper part of a universal indicator bracket is combined with the switch and screwed on the left below the drive switch unit. Fig. 1



The status LED is then attached to the right-hand side of the handlebar using the upper part of the second universal indicator bracket. Fig. 3

Then insert the indicators into the indicator holders, fix them lightly with the nut and pull the rubber cap over the cable onto the nut.

The switch and indicator can now be aligned for the first time. All 4 elements are then connected to the front splitter. The cable with the white marking is for connecting the right-hand indicator in the direction of travel.



Fig. 2



Fig. 3

## Blinkerbox



Fig. 4

The intended mounting location for the blinkerbox is on the rear swing arm. It should first be provisionally attached there.

Fig. 4

The cable splitters already laid from the indicators and the switch can now be connected to the 6-pin extension cable from the blinkerbox.

The 3-pin cable splitter of the blinkerbox is routed with the 3-pin extension cable on the existing cable to the luggage carrier and underneath it to the rear light.

## Connecting the power supply and initial function test

Once the front indicators and switches are connected to the blinkerbox, an initial function test can be carried out.

To do this, the 2-core connection cable of the blinkerbox is connected directly to the connection of the head or rear light on the engine.

The white wire is connected to the positive terminal and the brown wire to the negative terminal.

If required, the existing light connection cable can be split and reconnected with the 3-way single-wire connectors.

To do this, simply insert the 3 cable ends that belong together into the single-wire connector and press the round part together using combination pliers. It is not necessary to strip the cables.



If the connection cables of the blinkerbox are swapped, this will **not destroy** the box, it will only mean that the indicators do not work.

Alternatively, the test can be carried out using a 9 volt block battery, for example.

The indicators will flash very quickly at this point, which is due to the lack of rear indicators. This corresponds to the requirement of the German Road Traffic Licensing Regulations (StVZO), according to which one indicator should indicate the failure of the other indicator on the same side by flashing faster.

## Fitting the rear indicators



To fit the rear indicators, the rear light is removed. The indicators should then be screwed into the indicator bracket and checked to see in which position the indicator bracket together with the indicators and rear light fits best in the rear light bracket. The rear light is then refitted together with the indicator bracket.

The 3-pole cables can now be routed from the blinkerbox to the mounting position of the rear indicators and connected to the indicators there using the rear splitter.

The cable with the red or white marking on the rear splitter is for connecting the right indicator in the direction of travel.

Fig. 5

During a new function test, the indicators should now flash in the normal rhythm. A rhythm of 60 to 120 times a minute is normal.

## Assembly termination

To complete the installation, check the position of the switches and indicators and tighten all screw connections.

The routing of the cables should also be checked so that no cable can be crushed when moving the handlebars or through other joints.

Finally, all cables can be secured in their final position using the cable ties supplied.

## Operation on a separate battery

If the indicator set is not to be operated from the bike's light connection, a separate rechargeable battery can be used, which can be ordered under item number 1510160210.

If the indicator set is ordered together with the battery, the blinkerbox is fitted with a 30 cm long connection cable for the battery instead of the 2-core power supply cable.

If the battery is ordered at a later date, the 30cm long connection cable for the blinkerbox is included.



## Function and operating instructions

The function complies with the requirements of the StVZO (Germany) and UN ECE 50.

### Operation with indicator switch (toggle switch)

When the toggle switch is mounted on an appropriately configured blinkerbox triggers flipping the toggle switch to the left the turn signals to flash on the left side. When the switch is returned to its original position the flashing stops.

Flipping the toggle switch to the right causes the indicators on the right to flash.

If the switch is not returned to the home position, **the flashing stops automatically after 4 minutes**. Returning the toggle switch to its original position and switching it on again will restart the flashing.

**Triggering the hazard warning lights is not possible with the toggle switch.**

### Operation with buttons

When the push buttons are mounted on an appropriately configured blinkerbox triggers a short press on the left push-button flashing of the turn signals on the left side. If the left button is pressed again, the left turn signals stop flashing. Pressing the button on the right side causes the indicators on the right side to flash. If the right button is pressed again, the flashing stops. Switching the flashing from e.g. left to right can be achieved by pressing the other button in each case.

If the indicators are not switched off manually, **the flashing stops automatically after 2 minutes**.

The hazard warning lights are triggered by switching on the other side. Pressing and holding one button and pressing the other button starts the warning flashing. It can be stopped again by pressing one of the buttons.

**The warning flashing stops automatically after 15 minutes.**

### Warning function in case of failure of one of the turn signals (only with configuration for 4 turn signals)

If, for example, one of the rear turn signals fails:

- The front indicator flashes twice as fast. If the front indicator fails, the rear indicator flashes twice as fast.
- The separate status LED (if installed) flashes twice as fast.
- The sound generator in the flasher unit (if active) ticks twice as fast.

## Configuration of the Blinkerbox

The blinkerbox can be configured for different operating modes. The push-buttons or a corresponding device and a connection to the power supply are necessary for configuration.

The configuration mode is set as follows: Keep one button permanently pressed and press the other button eight times in succession. Then release both buttons. A short tone sequence sounds. Now the blinkerbox is in configuration mode and the software version can be set. The following is an overview of which button presses determine which setting:

1st button press:	number of installed turn signals	left button = 2 turn signals	right button = 4 turn signals
2nd button press:	button or switch operation	left button = push button	right button = switch
3rd button press:	indicator sound on or off	left button = indicator sound off	right button = sound on

This results in the following key combinations to select the software versions in configuration mode:

L designates the left button, R the right button:

2 indicators switch with sound	LRR	4 indicators switch with sound	RRR
2 indicators button with sound	LLR	4 indicators button with sound	RLR
2 indicators switch without sound	LRL	4 indicators switch without sound	RRL
2 indicators button without sound	LLL	4 indicators button without sound	RLL

After entering the key combination, the configuration is completed and another short tone sequence sounds. If no switch is pressed is made, the configuration mode is automatically exited after approx. 2 minutes. The configuration is retained even after disconnection from the power supply.

## Technical Data Blinkerbox alpha22

EMC approval	EN 55016-2-1; 2014-12, EN 55016-2-2; 2011-09 ISO 11451-1; 2015, ISO 11451-2; 2015, EN 15194
Operating voltage	6-48 Volt
Output voltage	12 Volt
Operating temperature	-20 to +85 °C
Flashing frequency	90 pulses ± 30 pulses per minute
Protection class	IP 54

Subject to technical changes.

# velorian

## EU - Konformitätserklärung EU - Declaration of conformity



**velorian e-bike blinkerbox alpha22**

Wir, die velorian GmbH,  
We, velorian GmbH,

velorian GmbH  
Storkower Str. 115a  
10407 Berlin  
Germany

erklären, dass vorstehend bezeichnete Geräte in Konzeption und Bauart sowie in der von uns in Verkehr gebrachten Ausführung den Anforderungen der zutreffenden, unten aufgeführten Richtlinien entsprechen.

hereby declare that the design and construction of the above-mentioned products and the version placed on the market by us comply with the requirements of the applicable directives listed below.

**EN 55016-2-1; 2014-12**

**EN 55016-2-2; 2011-09**

**EN 15194 11:2018**

**ISO 11451-1; 2015**

**ISO 11451-2; 2015**

Berlin, 01.08.2022

A handwritten signature in black ink, appearing to read 'Eckehard Bahr'.

---

Eckehard Bahr  
velorian GmbH  
Geschäftsführung